Oster®

User Manual **FAMILY SIZE AREPA MAKER**

Manual de Instrucciones **AREPA FAMILIAR**

Manuel d'Instructions **APPAREIL À AREPAS FAMILIAL**

MODEL/MODÈLE MODELO 4798

Visit us at www.oster.com

P.N. 111840

IMPORTANT SAFEGUARDS

When using your electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USE

- Do not touch hot surfaces. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning.
- When the unit is not in use and before cleaning, unplug it from the wall outlet.
- To protect against risk of electrical shock, do not immerse the appliance in water or any other liquids.
- Close supervision is always necessary when this or any appliance is used near children. This appliance is not for use by children.
- Do not operate this or any appliance with a frayed or damaged cord or plug or after the appliance malfunctions or is dropped or has been damaged in any manner.
- Do not use attachments not recommended by the manufacturer; they may cause fire, electric shock or personal injury.
- Do not use outdoors or for commercial purposes. Do not use this appliance for other than its intended use.
- Do not let the cord dangle over the edge of a tabletop or countertop or to touch hot surfaces.
- Do not place the appliance near a hot gas or electric burner or in a heated oven.
- A fire may occur if the Arepa Maker is covered or touching flammable materials, including curtains, draperies, walls, etc., when in operation. **Do not store any items on top of the appliance when in operation.**
- Do not cover the Arepa Maker with metal foil. This will cause overheating of the appliance. Do not place any flammable materials on or close to the Arepa Maker, such as paper, cardboard or plastic or any material that can be set afire or melted.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electrical shock.

SPECIAL INSTRUCTIONS

1. Use your OSTER® FAMILY SIZE AREPA in areas where there are no curtains or cabinets that may be affected by the heat.
2. Use the unit in an open space that is well ventilated. Only use utensils that are heat resistant.
3. Disconnnect your OSTER® FAMILY SIZE AREPA before you clean it or when it is not in use.
4. Allow the unit to cool before you put it away for storage.
5. Do not leave the OSTER® FAMILY SIZE AREPA unattended while it is in use.
6. To protect against risk of electrical shock, do not immerse the appliance in water or any other liquid.

THIS UNIT IS FOR HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS

Polarized Plug Information

This appliance has a polarized plug *(one blade is wider than the other)*. To reduce the risk of electric shock this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse it. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

Extension Cord Use

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the electrical rating of the cord must be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Welcome

Congratulations on your purchase of an OSTER® Family Size Arepa!
To learn more about OSTER® Products, please visit us at www.oster.com.

Features of the Oster® Family Size Arepa

1. **Locking Lid**
   The lock ensures the complete closure of the unit. This will allow it to maintain the appropriate temperature and cooking uniformity.
2. **Non-Stick Cooking Plates**
   The non-stick cooking plates allow for easy release of the Arepas.
3. **Toast Control Dial**
   A heating controller for the plates. While the toast control dial is in the zero position, the plates will not heat.
4. **Indicator Lights**
   The Oster® Family Size Arepa has two indicator lights as follows:
   Red: Indicates that the Oster® Family Size Arepa is plugged into an electric source.
   Green: Lights after the toast control dial is turned and begins warming the plates. When the toast control dial reaches the zero position, a bell rings. Once the the green light turns off the plates begin to cool down.

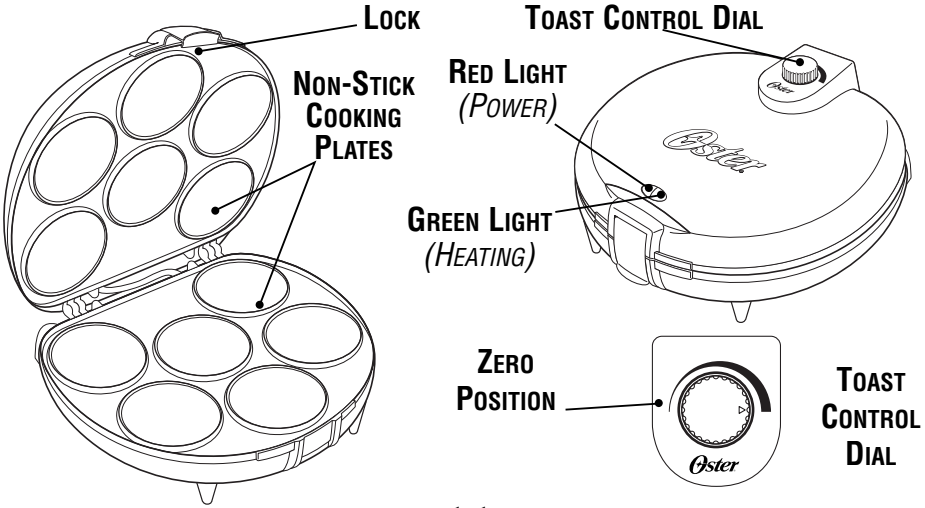

Recommendations for Your Oster® Family Size Arepa

Before using your Oster® Family Size Arepa for the first time, please follow the recommendations below:

1. Read and keep this instruction manual.
2. Plug the electric cord into an outlet. Use only voltage specified on bottom of the unit.
3. Open the Oster® Family Size Arepa by lifting up on the lock.
4. Clean the cooking plates with a dampened cloth. Wipe dry and condition with a light coating of oil, butter or margarine.
5. Plug into outlet. The red light will go on. In order to start warming the Oster® Family Size Arepa, turn the toast control dial to its maximum setting and wait for 8 minutes before beginning to use.
6. Have the dough ready, divide it into equal portions. Using the palms of your hands, roll portions of dough and place one (1) in each non-stick cavity, close the lid and turn the toast control dial. For a second batch of Arepas immediately, put aside the cooked Arepas, turn the toast control dial to avoid cooling down the plates and place the dough in the cavities. As you get acquainted with your Oster® Family Size Arepa, you will become familiar with the ideal quantity of dough needed to prepare proper Arepas and the ideal cooking time needed by using the toast control dial.
7. In approximately 7 minutes, you will be able to enjoy 6 delicious Arepas.
8. The estimated cooking time to prepare well done Arepas is approximately 7 minutes. However, if you prefer darker, golden brown Arepas, you can leave them in the Oster® Family Size Arepa for a few minutes longer.

Care and Cleaning

1. Clean the cooking plates with a soft cloth dampened with warm water.
2. If you wish to clean food residue stuck to the cooking plates, use a soft cloth with oil while the plates are still warm.
3. It is important to remember that cleaning the appliance with abrasive cleansers such as steel wool pads, scrubbing powders, bleach, etc., can damage the housing and the cooking plates of your Oster® Family Size Arepa.
4. Wrap cord around unit after it has cooled and secure it with a twist tie.
5. No additional cleaning, servicing or maintenance is required. Store your Oster® Family Size Arepa in a cool, dry place.

One-Year Limited Warranty

Sunbeam Products, Inc., or if in Canada, Sunbeam Corporation (Canada) Limited (collectively "Sunbeam") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What Are the Limits on Sunbeam's Liability?

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A. –
If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.334.0759 and a convenient service center address will be provided to you.

In Canada –
If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.667.8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc., located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, located at 5975 Falbourne Street, Mississauga, Ontario L5R 3V8.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

For product questions contact:
Sunbeam Consumer Service

USA : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

©2003 Sunbeam Products, Inc. All rights reserved.
OSTER® is a registered trademark of Sunbeam Products, Inc.
Distributed by Sunbeam Products, Inc., Boca Raton, FL 33431

Pour les questions de produit:
Sunbeam Consumer Service

États-Unis : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

©2003 Sunbeam Products, Inc. Tous droits réservés.
OSTER® est une marque déposée de Sunbeam Products, Inc.
Distribué par Sunbeam Products, Inc., Boca Raton, Florida 33431

Para preguntas sobre los productos llame:
Sunbeam Consumer Service

EE.UU. : 1.800.334.0759
Canadá : 1.800.667.8623
www.oster.com

©2003 Sunbeam Products, Inc. Todos los derechos reservados.
OSTER® es una marca registrada de Sunbeam Products, Inc.
Distribuido por Sunbeam Products, Inc., Boca Raton, FL 33431

Printed in China Imprimé en Chine Impreso en China